



HD-105/120 & T-124/326 Front Basket Installation Guide

These instructions are prepared for attaching a 21"x15"x9" front basket to a Husky industrial bicycle or tricycle. If you are attaching the basket to another brand of bicycle or tricycle, please consult the respective manufacturer for installation assistance/

Each basket comes with separate legs, handlebar fitting clamps, bolts and screws, and two 3/8"x26T axle lock nuts. The two axle nuts are shipped with baskets that are ordered with a Husky bicycle or tricycle.

Legs and clamps must be attached before attaching the basket.

1. Remove flanged axle nut pictured in Fig.1 and replace with lock nut that came with basket and pictured in Fig.2. Mount the lower part of 2-piece leg on the axle so that it is positioned between the flanged nut and 3/8" x 26T axle lock nut (Fig.3)



Fig. 1



Fig. 2



Fig. 3

2. Attach the 2nd piece of basket legs. You can adjust the length of the legs based on size of your bicycle.

3. Attach the basket hanger clamps to the handlebar as shown in Fig.4. You do not need the horizontal cross plate supplied with basket hardware unless your bicycle has a short handlebar span.



Fig. 4



Fig. 5

4. Attach the basket to the legs first, and then to the hanger clamps on the handlebar. Tighten all the nuts and screws.

PLEASE CALL (800) 392-337 IF YOU NEED ASSISTANCE.