

The combination of this lock is freely resettable. To reset the combination please proceed according to the following steps:

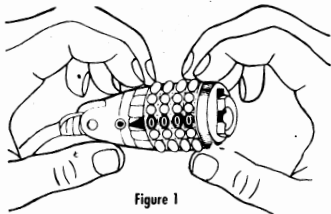


Figure 1

(1) When the lock leaves the factory the combination is preset at 0-0-0-0. If you wish to set your own combination, with the lock in an unlocked condition rotate the ring on the right end in a clockwise direction until the notch is in a 12:00 position, as shown in figure 1.

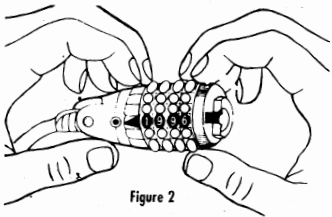


Figure 2

(2) Now rotate the four number dials to set your desired combination (combination should be aligned with the arrowhead). After setting the combination, rotate the ring on the right hand side in a counterclockwise direction until the notch is in a 9:00 position.

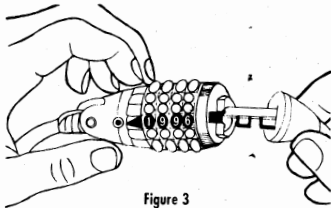


Figure 3

(3) To make sure that the combination you have set is correct, insert the other end of the lock into the right hand side of the combination lock in the direction of the arrow.

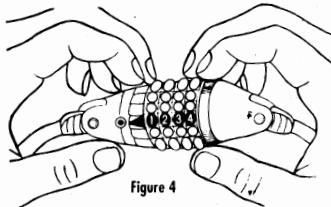


Figure 4

(4) Turn the number dials randomly to fasten the lock. If you wish to open the lock, just rotate the dials until the combination you have set is lined up with the arrowhead (arrowhead is on the left). This completes the procedure for setting the combination. If you wish to set a new combination, just repeat these four steps.